

Dispenser Loading Instructions Automatic Foam Soap



9700	-	Translucent
9730	-	Red
9740	-	Green
9750	-	Blue
9760	-	White

When installing the dispenser, make sure it is at least 20cm above a shiny surface.
This will prevent unwanted interference with the sensor.

- Remove the seal from a new soap cartridge and screw on the pump.
- Place cartridge and pump (pump downwards) into the holding arms.
- Close cover
- Once the LED indicator has blink red / green three times the dispenser is ready to use.

LED indicator

Flashes green when dispensing

Flashes red when batteries are low

Trouble Shooting Tips

If the unit will not function at all, then check:

1. The batteries are positioned in the battery compartment correctly
2. The cover is closed.
3. If the LED indicator is red remove batteries and replace with new ones

General Product Information

- The dispenser runs from 4 x “AA” batteries.
- The batteries should approximately last 10,000 shots (5 cartridges)