




Dispenser Loading Instructions OptiServ™ Hybrid



87510	-	Translucent
87530	-	Red
87540	-	Green
87550	-	Blue
87560	-	White

Dispenser Loading – Hybrid

- Install the roll of paper so that it unwinds from the back
- Thread paper over white tabs and under bar. Fold back the start of the new roll about 1” – 2” and crease along the full width of the towel.
- Then press the ‘PUSH’ lever to advance the paper.

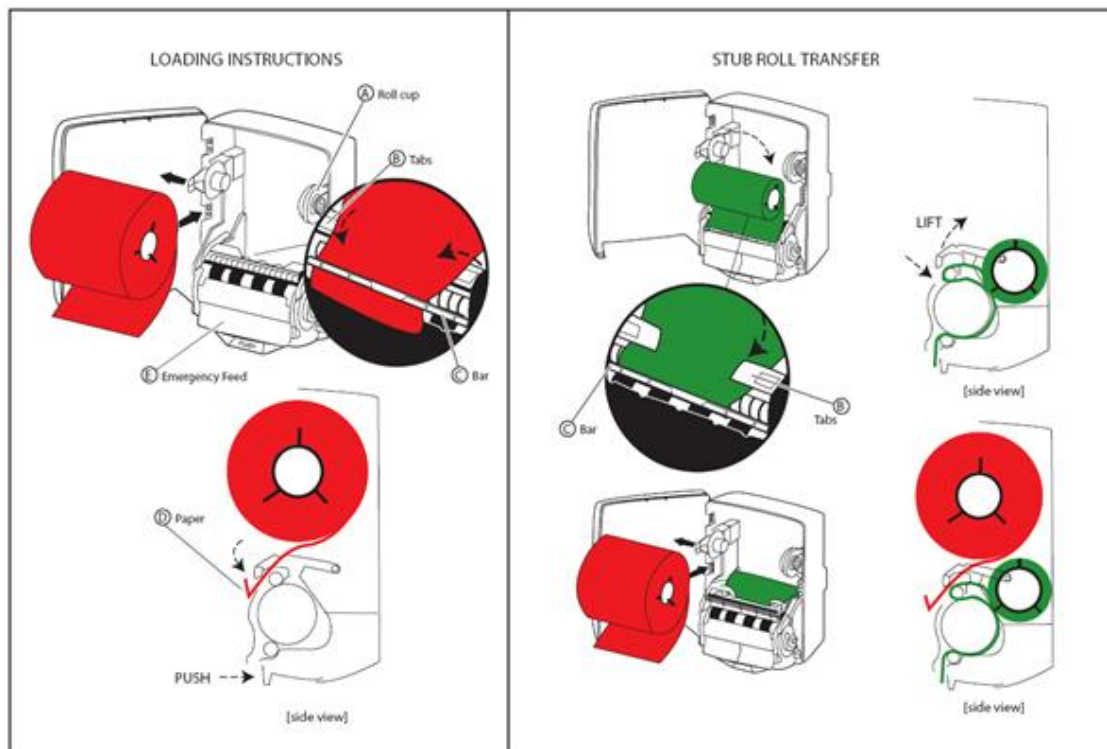



Automatic Stub Roll Transfer for Hybrid

- Remove the stub roll from the roll support arms and place in the back of the dispenser, ensuring that the paper runs under the two side pieces of the cradle.
- Place a new roll on the roll support arms with the paper unwinding from the back. Place the end of the paper under the white bar at the front of the cradle, ensuring that the paper runs over the two side pieces of the cradle. Fold back the start of the new roll about 1"-2" and crease along the full width of the towel.
- When the stub roll finishes, the user can advance the new roll by pressing the 'PUSH' or waving hand across sensor.

General Product Information

- The dispenser runs from 6 x "D" Cell batteries.
- The batteries should last up to 60,000 11 inch (27.94cm) towels.